



1. Distance measure

Press  button to open the machine, adjustment laser point, and press  button again, only need 0.8second, the measurement results will be displayed in the screen.

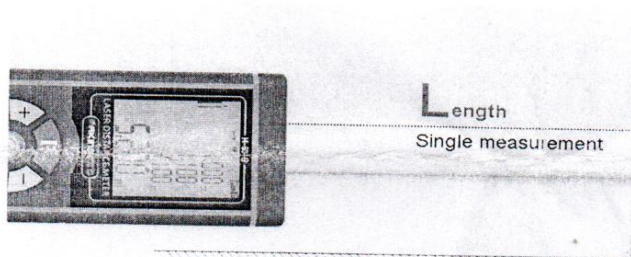


2. Square Measure

Press  to show  icon, and press  to get first distance, press  again to get second distance, wait about 0.8second, the square measure result will be display in the screen.

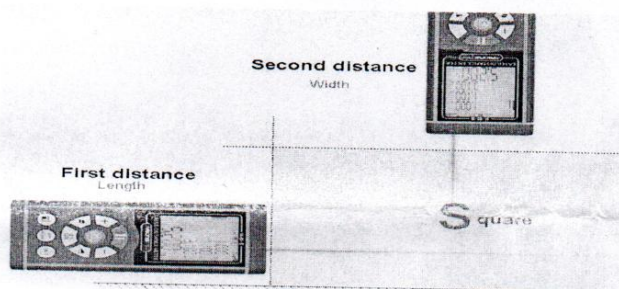


3 Volume Measure

Press twice  to find icon , then measure the length, width and height, easy to get the volume result but no need to move

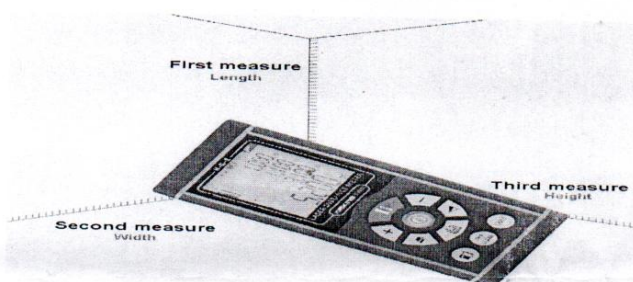


4.Single Pythagorean

Press  to show  icon, first measure hypotenuse, then measure Right-angle side machine will calculate the height of distance between the two ends.

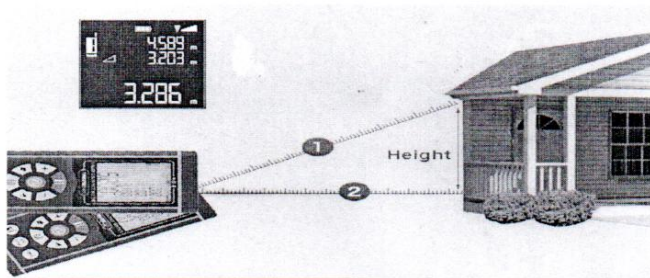


5. Pythagorean

Press twice  to show icon , distance meter easy to calculate the height through three measure.

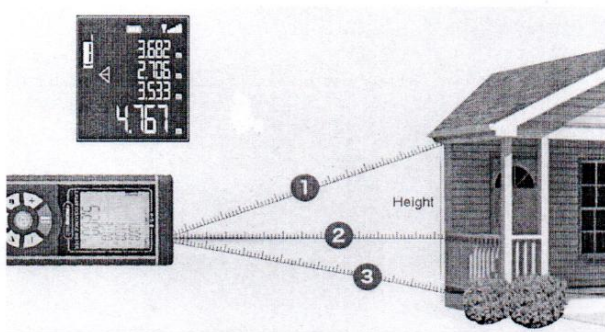

6. Min/Max Measure

Open machine, press  button 2second can use the Min./Max function, the screen will show the min date and max date after scan, and you can back to singl measure function by short press  button.

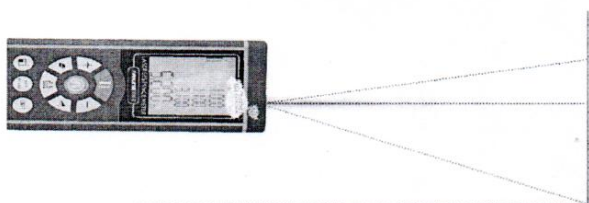

7. Measure Position

